

Popcorn Machine Rental



Popper – Table Top



Poppers on Antique Cart



PJ's Party Supply & Rentals

You invite the guests, We'll Supply the Rest!™ **940-384-PRTY**

You can Rent our Antique Popcorn Poppers with or without a Cart

RENTAL \$85.00

This includes Supplies for 50 Servings

(You will get 10 Pre-Pack Popcorn/Oil Kits and 2/25ct 1 Ounce Popcorn Bags)

ADD FOR CART..... \$20.00

A 30% Non-Refundable Reservation Fee is due upon placing your request. The balance of your rental order is to be paid at our store the day of pick-up or 7 days prior to a scheduled delivery. No payments are made to delivery drivers. Rentals are based on two days, you pick the items up the day before your event and bring them back the day after. If you need the rental for more than this term, please ask for long term rates.

Additional Supplies

MINIMAX CORN/OIL/SALT KITS -\$1.50

1 OUNCE POPCORN BAGS 25CT - \$1.50

POPCORN BOXES 10CT LARGE - \$4.99

Popcorn Pre-packs are a convenient way to pop corn. Everything you need is in one package. Each kettle of corn popped will yield 5-6 one ounce bags of popcorn.



Nothing draws a crowd faster than the smell of fresh popped Popcorn! Consider popcorn for you next fundraiser, Birthday Party, Festival or Carnival!

Fun Food for Fun Times!




POPCORN MACHINE INSTRUCTIONS

Color: Red and Gold. Two Pieces – Cart & Popcorn Machine Plus Supplies

Transporting: Large vehicle or pickup truck, secure with rope. Heavy.

NOTE: The kettle is removed from its cradle and unplugged for transport.

DO NOT TRANSPORT WITH KETTLE INTACT!

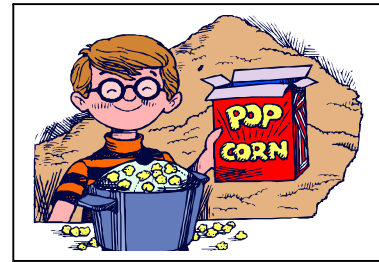

MACHINE OPERATIONS

There are three switches on this popper.

1. **LIGHT AND WARMER SWITCH** – turns on heat lamp and strip heater under the corn pan.

2. **KETTLE MOTOR SWITCH** – turns on motor which drives kettle agitator shaft

3. **KETTLE HEAT SWITCH** – turns on heat element inside kettle

CAUTION: The motor air intake and exhaust holes located on top of machine must be clear of any obstruction.

DO NOT COVER AIR VENT HOLES as serious damage may result.

TO AVOID SERIOUS BURNS, DO NOT TOUCH KETTLE WHILE IT IS HOT!!!

POPPING CORN

1. Turn “Kettle Heat” switch and “Kettle Motor” switch to ON. Turn “Light/Warmer” switch to ON. The “Light/Warmer” switch will remain on after popping is completed to keep popcorn warm.

2. On the first batch it will take the kettle approximately four (4) minutes to heat. Cut the MiniMax Popcorn Kit open across the top of the package. Open half lid of kettle and pour in the contents of the package. Be careful not to touch the hot kettle. Drop the half lid back down.

ALWAYS LEAVE THE MACHINE DOORS OPEN WHEN POPPING CORN. IF CLOSED IT WILL CAUSE STEAM AND DAMAGE THE MACHINE!

3. Allow popcorn to pop. It will pour over from the kettle to the bottom tray. When you do not hear anymore popping, rotate the black ball handle to dump the popcorn still in the kettle. Return kettle to upright position.

4. Repeat the cycle starting with item 2.

NOTE ALWAYS POP 4 to 5 BATCHES OF CORN IN A ROW. THE QUALITY AND FLAVOR ARE BOTH BETTER ON No. 2, 3, 4, and 5 THAN ON THE INITIAL BATCH.

5. On the final kettle of corn, turn the “Kettle Heat” switch to OFF half way through popping. The kettle will still retain enough heat to finish the last batch and this will eliminate smoke and odor after you have finished popping. After turning out the last batch turn the “Kettle Motor” switch to OFF. You may now close the machine doors.

NEVER LEAVE THE HEAT ON WHEN YOU ARE NOT POPPING.

6. **TURN ALL SWITCHES OFF** at the close of your operations.

CLEANING INSTRUCTIONS

After you finish popping for the day, or your event, let the kettle cool. Please empty out as much popcorn and kernels as possible. You can pull out the kernel tray to empty. Unplug Kettle and remove carefully from its cradle. You may wipe down machine and kettle with the supplied towel and WATER ONLY.

NEVER IMMERSE KETTLE IN WATER!

WE WILL FINISH THE CLEANING!

REMEMBER, you are renting this equipment. Be sure to understand your rental contract and be familiar with all charges for any damage.

Complete your event by renting: Tables, chairs, linens, etc.

Don't forget to purchase enough popcorn supplies to last for your event



You invite the guests, We'll Supply the Rest!™

940-384-PRTY